




Quick Activation Guide

A Unit item lists

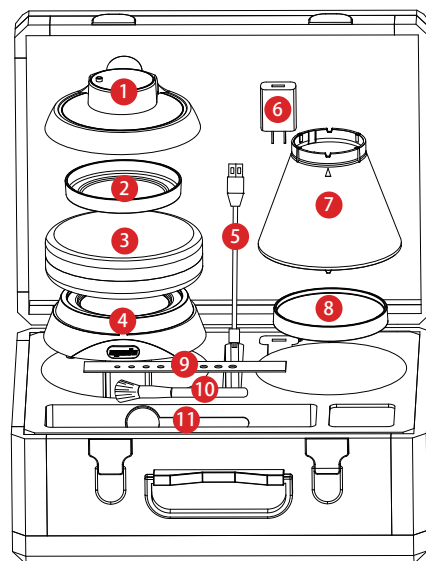


1. Top unit
2. Calibration weight
3. Charger
4. Bottom Unit
5. Cyclone cover
6. Funnel
7. Measurement cup
8. Base unit
9. Ruler
10. Brush
11. Spoon
12. Dual-headed charging cable
13. Moisture calibration sample
14. Powder plate
15. Bean plate
16. Color calibration plate (with gloves)

1. Top unit
2. Bean plate
3. Color calibration plate
(with gloves)
4. Base unit
5. USB charging cable
6. Charger
7. Cyclone cover
8. Powder plate
9. Ruler
10. Brush
11. Spoon

CAUTION : Remain 3 plastic pads on bean chamber might affect the testing result !


Step 2: Please remove 3 plastic pads from the bottom units.
(Picture 2)

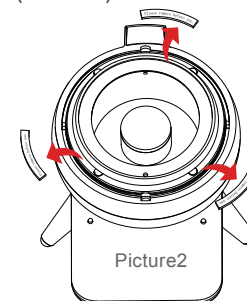

- Switch on the power safety protection switch:
Please check the bottom of both units and follow the red arrow as the pictures shown below. Push the black power safety protection switches **TWICE** to the “on” position to activate analyzer

1. Please match the arrows on top unit and cyclone cover


2. Follow the diagram to complete assembly

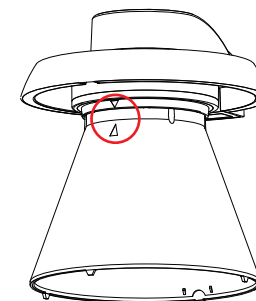

D Three Modes of Configuration


Top unit

(Color score analyzing)

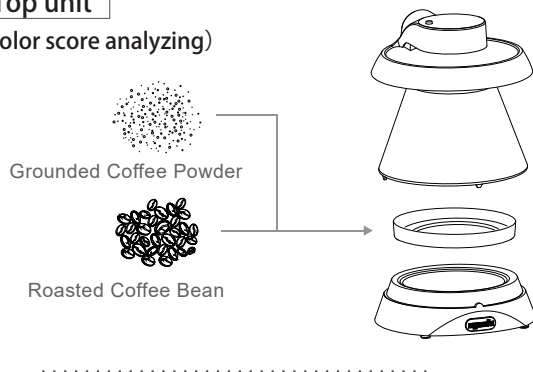

Bottom unit


(Moisture, density, temperature analyzing)

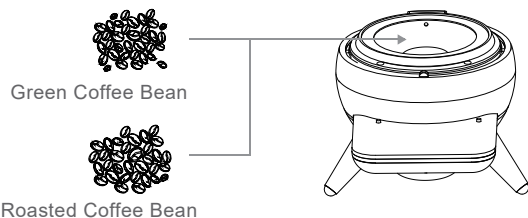

Remark: PRO version can test dry cherry & parchment.

Full unit


(Moisture, density, temperature, color score analyzing)

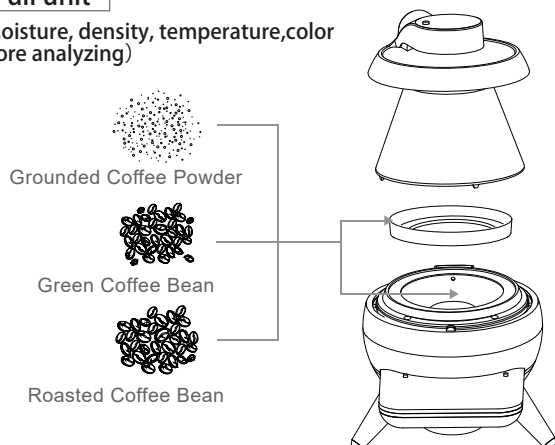

Remark: PRO version can test dry cherry & parchment.

E Bottom Unit Function Explanation

1. Control Panel

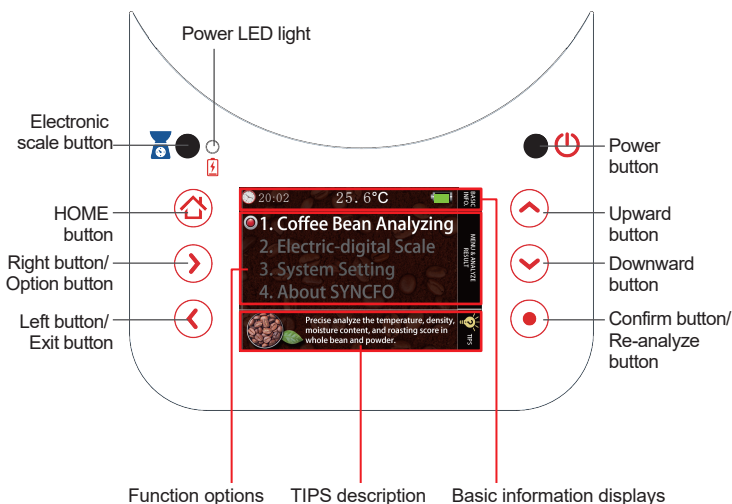


2. Menu 1-Coffee Bean Analyzing (a.) Menu 1-1 ~ 1-3

Choose the options shown on the screen to analyze the testing object, including: green beans, roasted beans or grounded coffee. The result will show on the screen in 3 seconds. (During analyzing, press HOME button or left button to cancel the analyzing at any time.)




F Top Unit Function Explanation

1. Control Panel

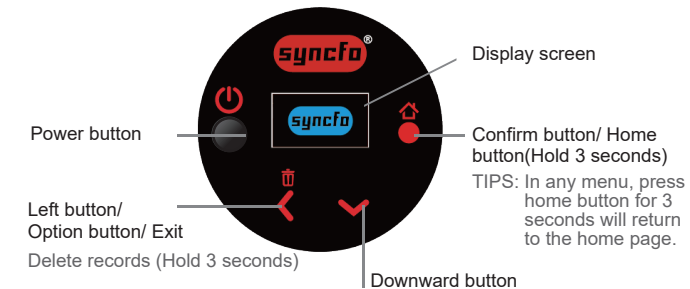

2. Menu 1-ANALYZES

Choose the options shown on the screen to analyze the testing object, including: green beans, roasted beans or grounded coffee. The result will show on the screen in 3 seconds. (During analyzing, press HOME button or left button to cancel the analyzing at any time.)

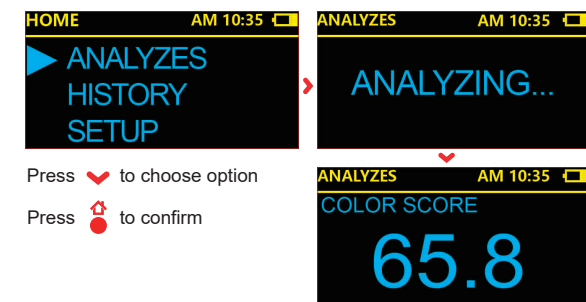

G Battery Charging

To charge the battery, please put the top unit on the bottom unit into a sphere like. Use the dual headed magnetic charger and connect it to the charging port at the back of both units. Note: Make sure the power safety protection switches are in "on" position for both units during charging.

